

Return of Empty Yarn Packaging (cops H5 / H6)

1st step:
Fill the bottom of the box
with empty bobbins
H5 / H6 – 42 pcs



2nd step:
Stick the second layer into
the gaps
H5 / H6 – 42 pcs



3rd step:
Stick the third layer into
the gaps but put the
bobbins headfirst
H5 / H6 – 42 pcs



4th step:
Fill the gaps again with
bobbins headfirst
H5 / H6 – 42 pcs



5th step:
Second layer:
Repeat steps 1 – 4
H5 / H6 – 168 pcs



TOTAL H5 / H6
336 bobbins / pallet

(pallet is for transport in 2 layers
pallet dimensions: 1200 x 1000 x 930 mm)




TOTAL separators H5 / H6
20 pcs / pallet

(pallet is for transport in 2 layers
pallet dimensions: 1200 x 1000 x 930 mm)



TOTAL wooden pallets
22 pcs / pile

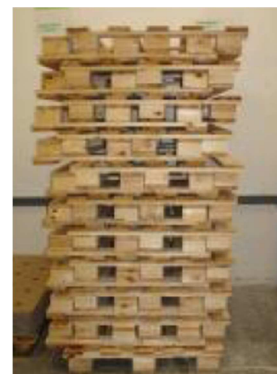

**Fold up following the
imprint on cardboard belt**



**TOTAL cardboard belts
30 pcs / pallet**



IMPORTANT!

- put a wooden pallet under each box
- fill box only up to the edge
- close the box with the original lid
- pack smaller quantities of separators, cardboards etc. in one box
- keep empty bobbins separate, sorted by type
- store all boxes dry